















## ***Configuration information for the 5D Mark II\Mark III***

We have found the following steps can optimize the camera settings for use with AnimaShooter.

### ***Steps:***

1. **Disconnect the camera from your computer.**
2. **Revert the camera's shooting settings and menu settings to the default.**
  - a. Under the  tab, select **[Clear settings]**, then press .
  - b. Turn the  dial to select **[Clear all camera settings]**, then press .
  - c. Turn the  dial to select **[OK]**, then press  — this will reset the camera to the default settings.
3. **Set the camera for Live View shooting of still photos.**
  - a. Set the shooting mode to **M (Manual)**.
  - b. Under the  tab, select **[Live View/Movie func. set]**, then press .
  - c. Turn the  dial to select **[LV func. setting]**, then press .
  - d. Turn the  dial to select **[Stills only]**, then press .
  - e. Turn the  dial to select **[Stills display]**, then press .
4. **Connect the camera to your computer.**
5. **Start AnimaShooter.**